



Pistol SERIES //

valken.com



WARNINGS

⚠ WARNING: Airsoft pistol are not toys. Misuse or careless use may cause serious injury, Especially to the eye. Eye protection designed for airsoft guns must be worn by the user and any person in range. May be dangerous up to 100 yds (91.44m). Read owner's manual before using.

⚠ WARNING: Do not brandish or display this airsoft pistol in public it may confuse people and may be a crime. Police and others may think it is a firearm. Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime.

Buyer and user have the duty to obey all laws about the use and ownership of this airsoft gun.

⚠ WARNING: This product may contains one or more chemicals known to the state of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

Your airsoft gun was designed to work with Valken branded airsoft ammunition. Use of other ammunition may cause your gun to malfunction and may void your warranty.

WARRANTY

VALKEN 'BULLETPROOF' ONE YEAR AIRSOFT PISTOL PARTS WARRANTY

Your Valken Airsoft Pistol is warranted to be free of defects in materials and workmanship for one year to the original owner. This warranty does not cover damages due to fair wear and tear, failure to provide routine maintenance, and does not include batteries or accessories. A copy of the original proof of purchase clearly stating the date of purchase is required to make any claim under this warranty. This warranty lasts for twelve months from the date of purchase and applies to the original purchaser, and is not transferable. In the event of a defect under this warranty, we will, at our option, repair or replace the product for the first 90 days provided our inspection indicates that an original defect exists: after the initial 90 days and up to twelve months, Valken will supply replacement parts to the original purchaser via surface mail at no charge. Valken reserves the right to replace any product which is no longer available with a product of comparable value and function. If Valken determines the repair is not covered under the warranty guidelines, there could be a charge to you for the cost of the repair and or any required parts. This is a limited warranty and does not cover damages caused by misuse, improper handling or installation or maintenance provided by someone other than Valken Incorporated. Using propane voids the warranty, please use Valken Green Gas. Any modifications made to this product may result in this warranty being null and void.

This limited warranty does not include consequential damages, incidental damages, or incidental expenses, including damage to property or any other expense. Valken disclaims any implied warranties. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on implied warranties so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country.

SAFETY AND MAGAZINE REMOVAL

There are several pistol models, there may be some differences from photos.
USE VALKEN AIRSOFT BB'S ONLY. USING LOW QUALITY BB'S MAY CAUSE DAMAGE
TURN THE SAFETY LEVEL SELECTOR TO SAFE MODE. KEEP THE SESELCTOR ON SAFE MODE UNTIL YOU ARE READY TO SHOOT.

STEP 1 SAFETY (M9 STYLE)



Turn the safety level selector to safe mode.

STEP 1 SAFETY (1911 STYLE)



Turn the safety level selector to safe mode.

STEP 2



1. Press the magazine catch.
2. Remove the magazine by pulling it downward

GAS INJECTION AND PELLET LOADING

There are several pistol models, there may be some differences from photos.

CO2 MAGAZINE

INSERT CO2 CARTRIDGE



1. Ensure magazine feed spring is up to release base plate. Slide base plate off.
2. Unscrew Co2 cartridge cap.
3. Insert Co2 cartridge.
4. Reinstall Cartridge cap and baseplate.

GREEN GAS MAGAZINE

INJECT GAS



1. Turn the magazine upside down with the gas refill inlet facing upwards.
2. Keeping the gas cyclinder inverted and vertical to the magazine, inject the gas until completely filled.

LOAD BBS



1. Pull the magazine feed spring down and hold.
2. Load BBs into the magazine as shown in the picture below.

LOAD BBS



1. Pull the magazine feed spring down and hold.
2. Load BBs into the magazine as shown in the picture below.

SHOOTING

There are several pistol models, there may be some differences from photos.



Insert the magazine until you hear it click into place. The gun is now ready to fire.



Always keep your finger off the trigger until you are ready to fire the pistol. Make sure the muzzle is always pointed in a safe direction.

SHOOTING

There are several pistol models, there may be some differences from photos.

FIRE MODE



Set the selector switch to fire mode.

SLIDE



Pull the slide backwards and then release.

HOP UP ADJUSTMENT

There are several pistol models, there may be some differences from photos.

STEP 1



Remove the magazine and set the selector switch to fire mode.

STEP 2



Press and hold the slide release button.

STEP 3




Turn the slide release lever to release mode.

STEP 4



Pull the slide forward to separate from the gun and expose the hop up adjustment.


STEP 5

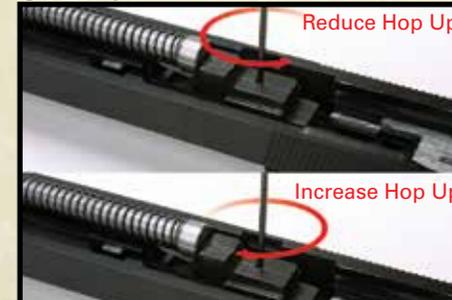

Use allen key to adjust the Hop Up.

HOP UP ADJUSTMENT

There are several pistol models, there may be some differences from photos.

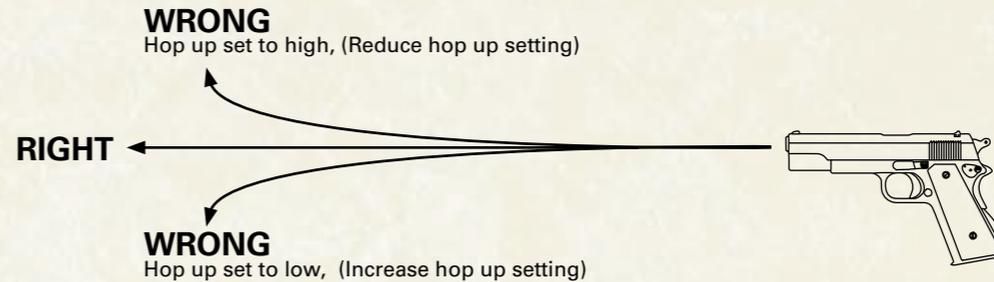

1. Handle and operate the airsoft pistol safely.
2. Select safe and proper targets.
3. Care for and maintain the pistol properly.
4. Store the gun unloaded in a safe and proper manner, and check to see that the gun is unloaded when re moved from storage or received from another person.
5. Treat every airsoft pistol as if it were loaded. Using a barrel cover is recommended.
6. Always wear eye protection designed for airsoft pistol when handling or shooting or in range of any airsoft pistol, and wear them over prescription glasses.
7. Keep your finger off the trigger until ready to shoot.
8. Never point the airsoft pistol at anything you do not wish to shoot.
9. Keep the airsoft pistol on safe until ready to shoot.
10. Avoid ricochet. Never shoot at a hard or flat surface or at water.
11. Backstops should be inspected for wear before and after each use. Discontinue use if the backstop surface shows signs of failure. Since backstop surfaces eventually fail, always place the backstop in a location that will be safe should the backstop fail. Discontinue the use of a backstop if the projectile rebounds or ricochets.
12. Perform routine inspection and maintenance, including:
 - a. Modification of the pistol mechanism may cause a pistol to malfunction and tampering with a pistol may make it unsafe to use.
 - b. Any change in the performance, such as lowered trigger force and shortened trigger travel, indicates possible wear and that such pistols should be inspected, replaced, or properly repaired, and repairs should only be made by qualified personnel.
 - c. Check any pistol that has been dropped to ensure that its function has not been affected.
 - d. Information shall be included to indicate how to obtain service and locate authorized repair shops.



valken

1 Hawk court, Swedesboro, N.J, 08085, USA

Tel: 856.812.2800

www.valken.com